 
 


## DISPLAY DESCRIPTION

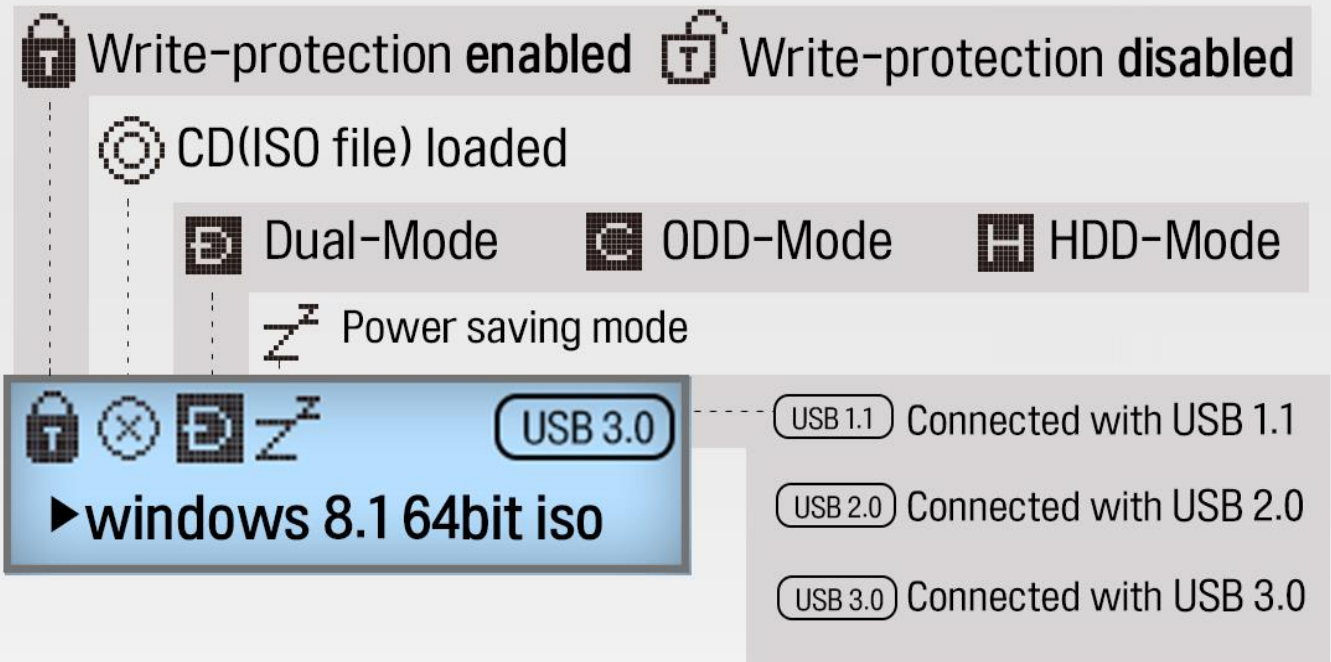

## KEY FUNCTIONS

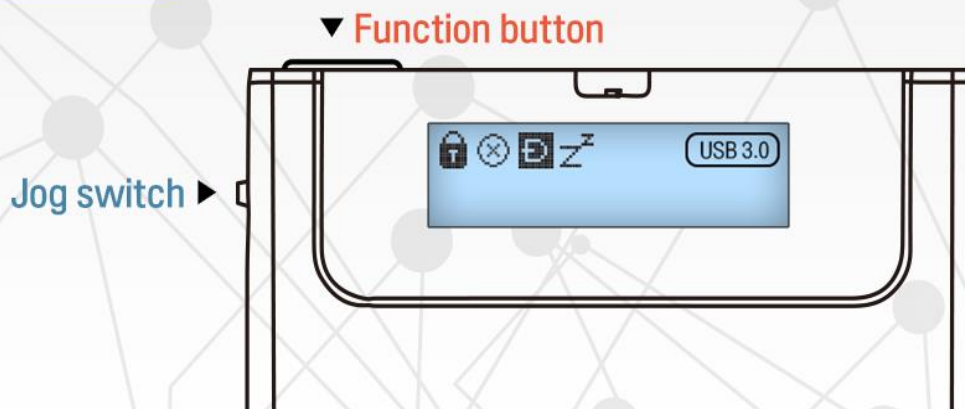

**BASIC** | Jog Up/Down = file navigation | Jog Press = load (ISO file)&VHD iso file when mounted | Jog Up/Down = unload CD(ISO file)  
 | Jog Down&hold = Save loading status and safely remove  
 | Jog Up&hold = Go to root folder | Jog Press&Hold = Go to menu  
 | Function press = Go to parent folder

**in Menu** | Jog Up/Down = Menu navigation | Jog Press = select menu  
 | Function press = previous menu | Jog Press&Hold = Exit Menu

 
**Connected to a PC** | Jog press&hold = connected with resetting status (Dual-Mode)  
**Press&hold the button** | Jog up&hold = connected with CD-Mode  
 | Jog down&hold = connected with HDD-Mode  
 | Function press&hold = connected with write-protected




iodd-2531 is shipped with NTFS firmware.  
You can download exFAT/FAT32 firmware from <http://iodd.kr>

If you are new to iodd-2541, please follow the next steps.  
You can mount ISO files easily.

1. Open the **Disk-Management (Start->Run->diskmgmt.msc)** in Windows. And do right click on the left panel of IODD disk.
2. Click Properties->Volume, you can check the partition types. **IODD supports only MBR.**
3. Also IODD uses only the first partition for root folder. **The first partition must be Healthy and Primary partition.**

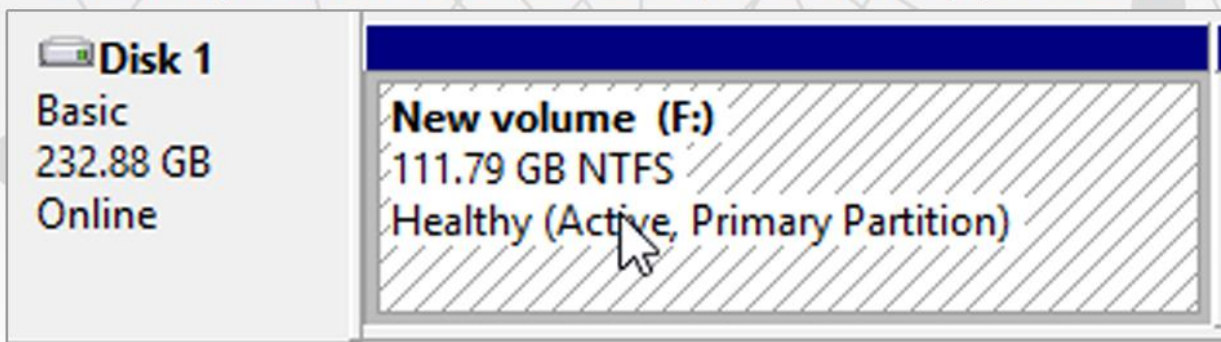

 4. Open the root folder of first partition in IODD disk
5. Make new folder named **\_ISO** at root folder

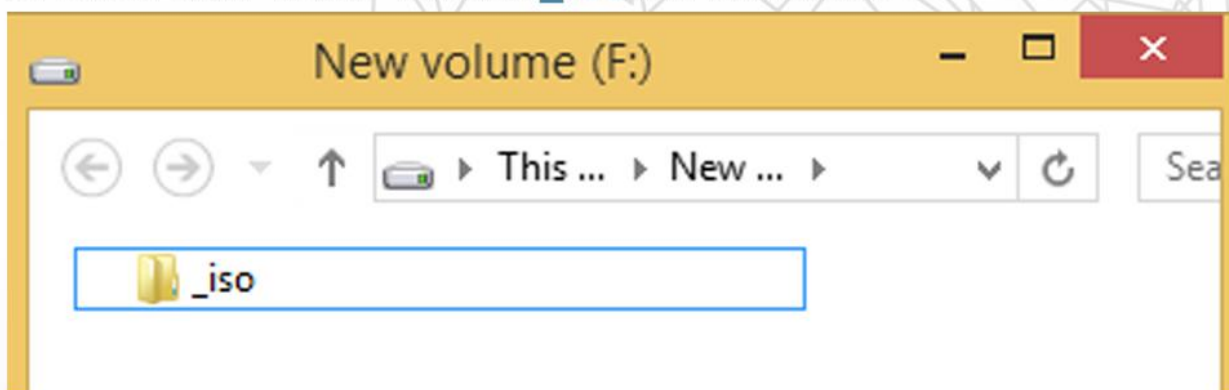

6. Copy into **\_iso** folder all supported file with subfolders.  
And Do safely remove and reconnect iodd-2541.

**IODD  
Supported  
file**



**\*.iso**



**\*.VHD**



**\*.RMD**



**\*.IMA**