


DISPLAY DESCRIPTION

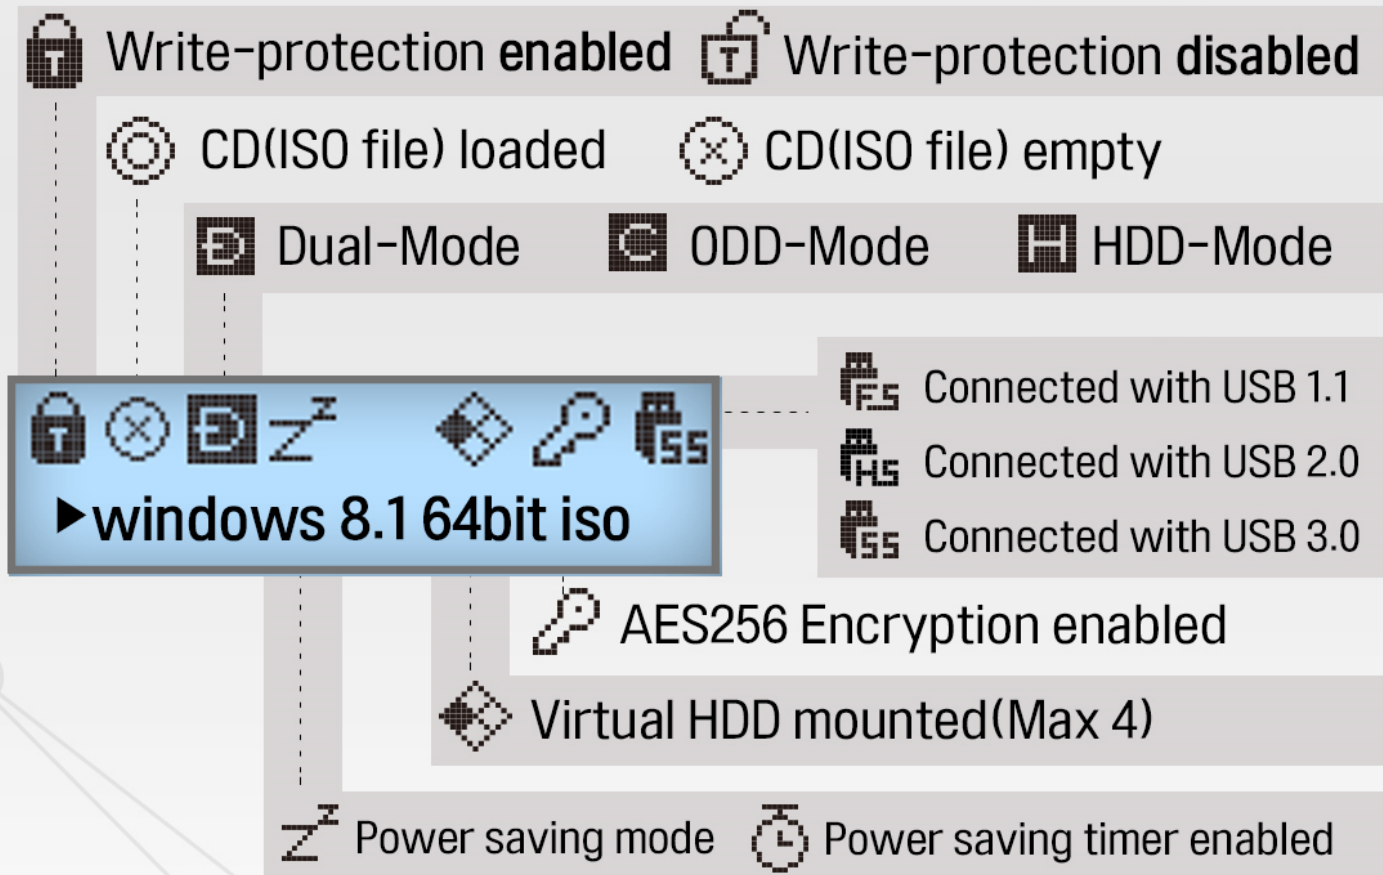

KEY FUNCTIONS

Click Press and hold 3 seconds

Navigation or CD(ISO file) unloading

load or unload CD (ISO file)&VHD enter to menu or exit

during PIN input delete last character(backspace key)

go to Root folder Unload All VHD files

*.ISO - load or unload with saving loading status instantly
*.VHD (or RMD, IMA) - Mount only one VHD immediately

Disable Write-Protect temporarily


Save loading status and safely remove Reboot IODD(USB reconnect)




iodd-2541 is shipped with NTFS firmware.
You can download exFAT/FAT32 firmware from <http://iodd.kr>

If you are new to iodd-2541, please follow the next steps.
You can mount ISO files easily.

1. Open the **Disk-Management (Start->Run->diskmgmt.msc)** in Windows. And do right click on the left panel of IODD disk.
2. Click Properties->Volume, you can check the partition types. **IODD supports only MBR.**
3. Also IODD uses only the first partition for root folder. **The first partition must be Healthy and Primary partition.**

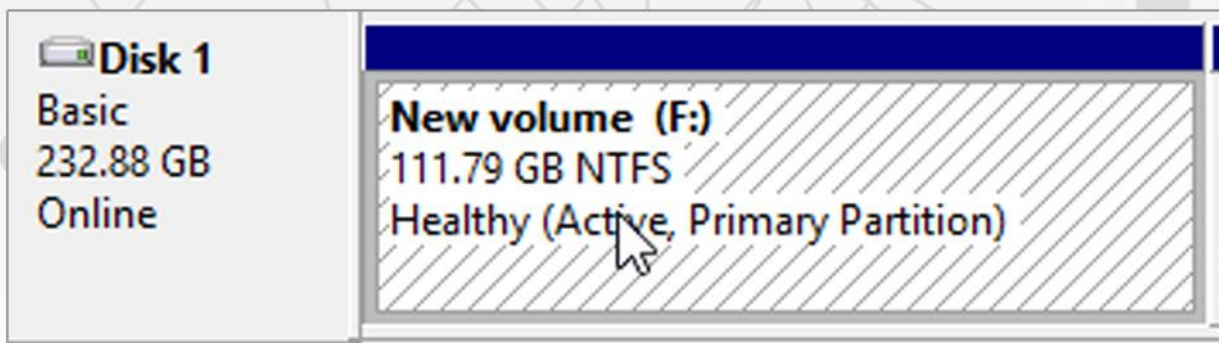

4. Open the root folder of first partition in IODD disk
5. Make new folder named **_ISO** at root folder

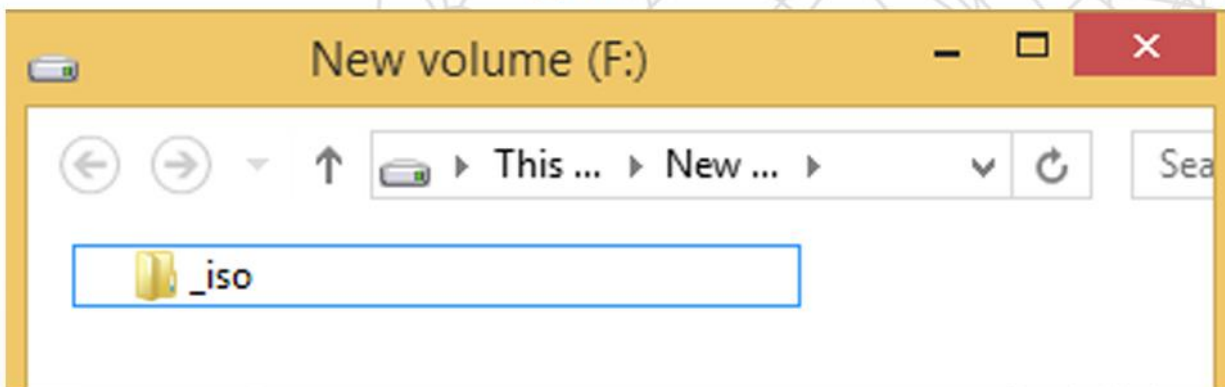

6. Copy into **_iso** folder all supported file with subfolders.
And Do safely remove and reconnect iodd-2541.

**IODD
Supported
file**



*.iso



*.VHD



*.RMD



*.IMA